


S1026

ASSEMBLY & INSTALLATION GUIDE

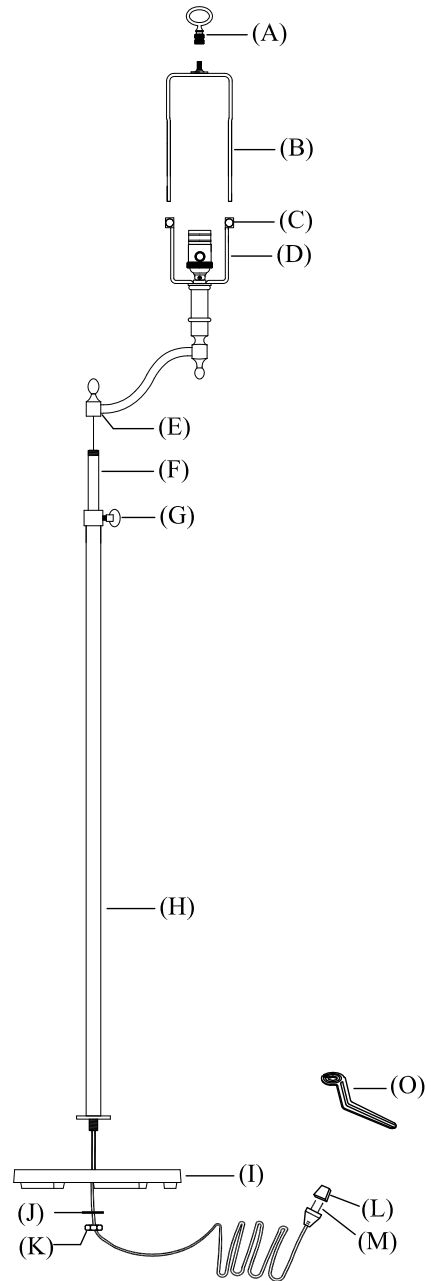

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove white plastic sleeve inside bottom opening of part (E) and top opening of base (I) before assembling.
2. Screw part (E) onto top nipple of pole (F).
3. Join parts (H), (I) together by tightening washer (J) and nut (K) to threaded rod at bottom of pole (H). Tighten with wrench (O) provided.
4. Loosen set screws (C), insert both sides of harp (B) into top opening of harp (D) and secure with set screws (C).
5. Remove finial (A) from harp (B), place lamp shade (not included) over the bolt attached on top of harp (B). Screw finial (A) onto the bolt to secure shade to harp (B).
6. Insert light bulb into socket.
7. Remove protective plastic (L) from electrical plug (M).
8. Plug lamp into electrical outlet.
9. ADJUSTMENT INSTRUCTION
 1. Loosen adjustment key (G) and found on lamp pole (F).
 2. Adjust lamp by pulling or pushing lamp pole (F) up or down to desired height.
 3. Tighten the adjustment key (G).