

Lucien Adjustable Floor Lamp Item # KW 1420

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- Carefully remove all parts from the carton.
- 2. Remove metal plate (I) from lamp base (F) by removing set screws (J).
- 3. Jolin pole (E) and lamp base (F) together, let the nipple of pole (E) pass through the hole of lamp base (F).
- 4. From the underside of base (F), slide the washer (G) over the threaded nipple and then thread nut (H) onto the nipple. Use the wrench (K) to tighten the nut.
 - Pull the wire tight from the cord exit.
 - Replace metal plate (I) to lamp base (F) and secure with set screws (J).
- 7. Remove the backing sheet from the felt paper (L), affix the felt paper (L) undernearth the metal plate (I).
- 8. Insert light bulb (not included) into socket.
- 9. Remove plastic cover (N) from electrical plug (M).
- 10. Plug lamp into wall outlet.

Adjustment Instructions:

5.

6.

- 1. Loosen adjustment key (D).
- 2. Adjust lamp height by pulling or pushing upper pole (C) up or down to get desired height.
- 3. Tighten adjustment key (D).

Swing rod (B) to adjust shade (A) to the desired position.

CAUTION: DO NOT TOUCH THE SHADE WHEN THE FIXTURE IS TURNED ON.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

