
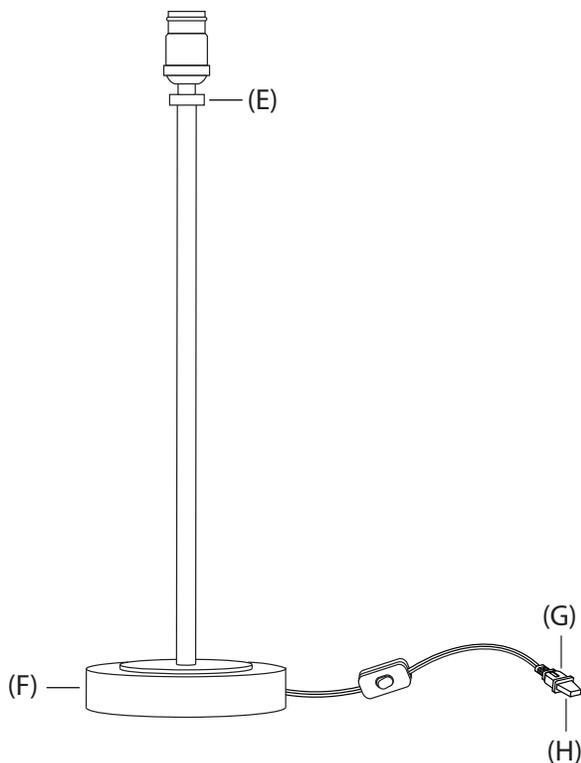
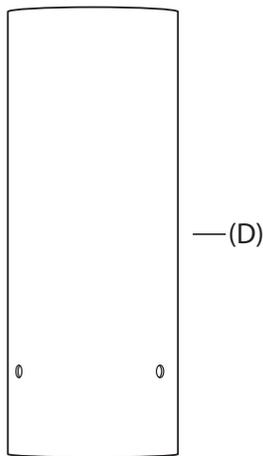


ASSEMBLY INSTRUCTIONS FOR YOUR

Jonathan Adler
PARKER BUFFET TABLE LAMP

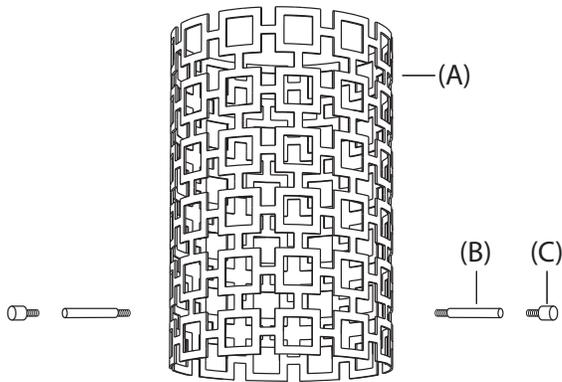

IMPORTANT SAFETY INSTRUCTIONS

- * This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock.
- * This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- * Never use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**
- * Turn the power off (remove electrical plug from outlet) before replacing light bulb, making sure the bulb has cooled.
- * Do not subject the lamp to any shock while lit as shattering of bulb may result.

ASSEMBLY INSTRUCTIONS:

* NOTE: Do not connect the electricity until lamp is fully assembled.

1. Remove all parts from carton. Discard packing material.
2. Place lamp base (F) on a level surface.
3. Locate alignment pins (B) and (C) in included hardware. Unthread alignment pins (C) from alignment pins (B). Set alignment pins (C) aside.
4. Lower glass shade (D) over socket housing (E). Insert shade pins (B) through holes in glass shade (D) and thread them into holes in shade housing (E).
5. Lower metal shade (A) over glass shade (D). Align holes in metal shade (A) with shade pins (B). Insert shade pins (C) through holes in metal shade (A) and thread them into the ends of shade pins (B).
6. Insert one (1) 60W MAX. Type A medium base bulb into the socket.
8. Remove protective plastic (H) from polarized plug (G). Insert polarized plug (G) into wall outlet.

* To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.