


Installation Instructions
FLOOR LAMP

ASSEMBLY INSTRUCTIONS :

- 1.Screw B1 onto A
Be careful not to twist the power cord and tighten securely
2. SCREW "B2" ONTO "B1"
Be careful not to twist the power cord and tighten securely
3. SCREW "B3" ONTO "B2"
Be careful not to twist the power cord and tighten securely
4. INSERT "E' ONTO "D"
5. PUT "F" ONTO "E"
6. TIGHTEN "F" BY "G"
7. PLEASE USE 3WAY-100WATT BULB.
(BULB NOT INCLUDED)

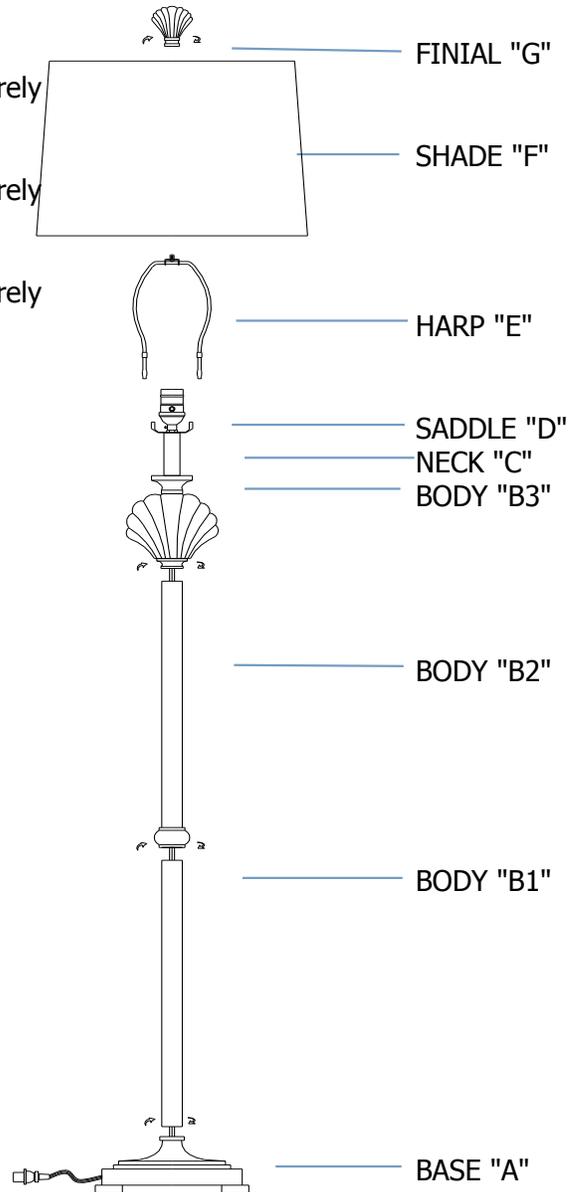

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

MADE IN CHINA