




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 28154-1

Carefully unpack all lamp parts from the carton.

1. Place the **Base** in an upright position on the floor, be sure the power to the installation point is power off
2. Thread **Part C** into Base, turn clockwise to tighten until snug.
3. Thread **Part B** into **Part C**, turn clockwise to tighten until snug.
4. Thread **Part A** into **Part B**, turn clockwise to tighten until snug.
5. Thread **Frame** into **Part A**, turn clockwise to tighten until snug.
6. Install the correct **Edison Bulb** (Included) onto the **Socket** before connecting the plug to the electricity outlet Box.
7. Position the **Socket** through the hole on the top of the **Glass Shade**.
Turn **Knobs** to make the **Glass Shade** fixed. Hand tighten until snug.

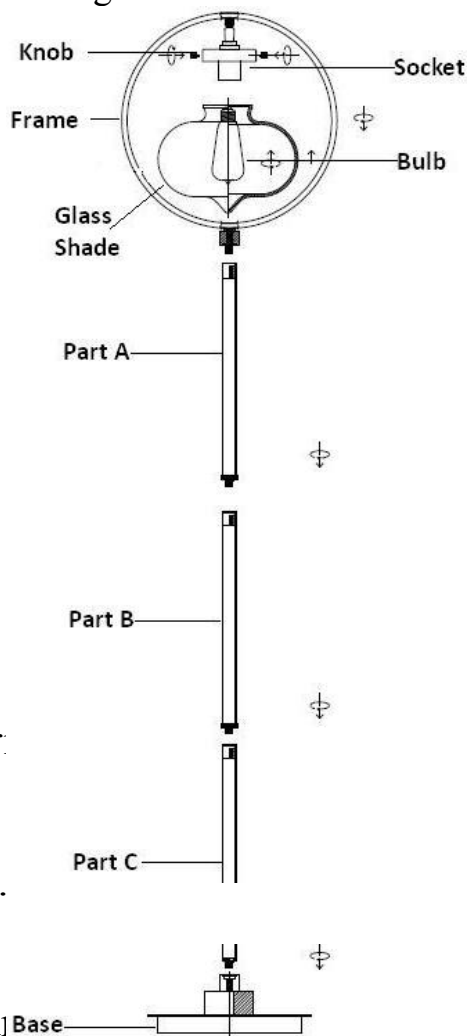

28154-1

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.