


ASSEMBLY INSTRUCTIONS

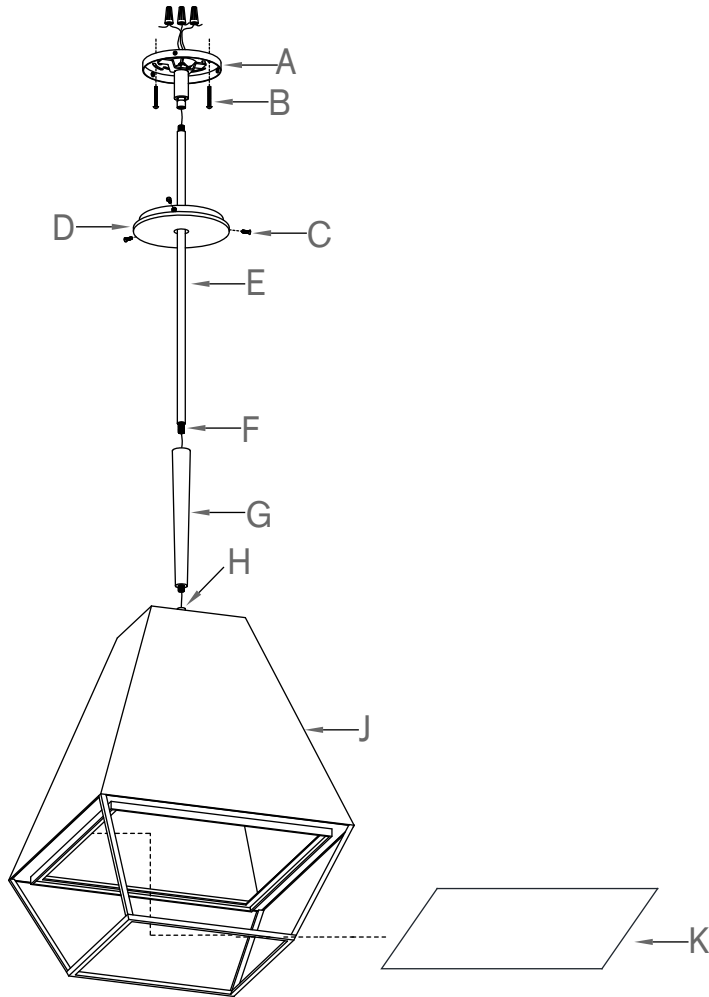

Odeum Medium Lantern Item # BBL 5102

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Remove mounting plate (A) from canopy (D) by removing canopy screws (C) in counter-clockwise direction.
3. Feed wire through the rod (G), (E) canopy (C) and mounting plate (A).
4. Thread pole (G) into the threaded hole on top of (H) on light fixture by turning in a clockwise direction.
5. Thread the nipple (F) with pole (E) into the threaded hole on top of pole (G).
6. Slide the canopy (D) to the pole (E).
7. Thread the mounting plate (A) on the pole (E).
8. Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
9. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tighten wrap the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect neutral wire from fixture (ridges molded wire) to the neutral wire from the junction box (usually white) . Fasten both wires together with a plastic wire connector and tightly wrap the wire connctor with electrical tape. Be sure no wire strands are exposed.
11. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connctor and wrap the connection with eutral tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
12. Tuck wire connections neatly into ceiling outlet box.
13. Attach canopy (D) to the affixed mounting plate (A) and secure with canopy screws (C).
14. Insert light bulbs (not included) into sockets.
15. Slantly Insert acrylic panel (K) into the frame from the bottom opening of light fixture (J).
16. Installation is complete. Restore power and test fixture.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.