


## ASSEMBLY INSTRUCTIONS

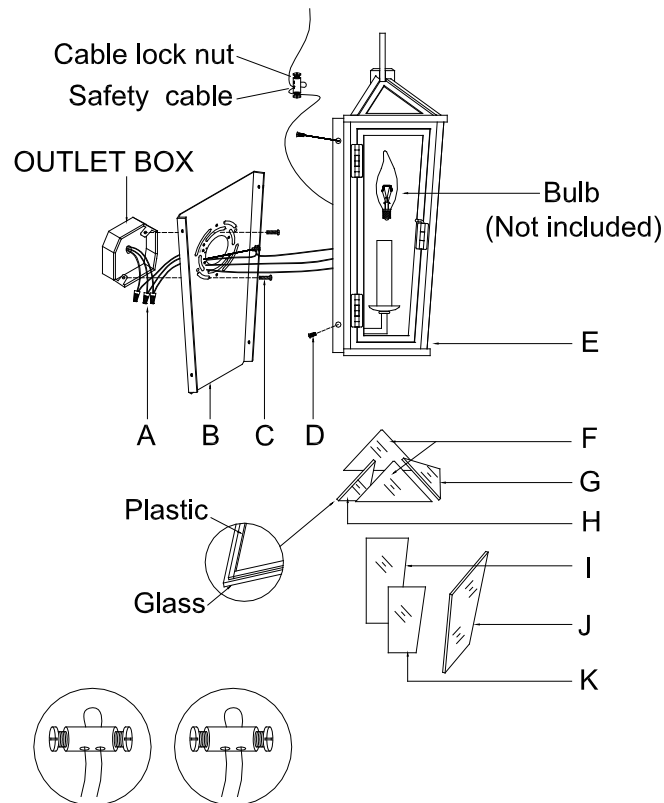

### TO assemble safety cables:

1. Join fixture safety cables with safety cable from ceiling.
2. Wrap both safety cable around the cable lock nut.
3. Insert screws into both holes on cable lock nut, secure screws with screw driver.
4. Push the cable lock nut into outlet box.

## Darlana Tall 3/4 Wall Lantern

Item # CHO 2087

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

**WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

**NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.**

1. Carefully remove all parts from the box.
2. Remove the mounting plate (B) from the fixture (E) by loosening the side screws (D).
3. Attach the mounting plate (B) to the outlet box then secure with mounting screws (C).
4. Connect the fixture Ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
5. Connect the fixture Neutral wire (WHITE) with the neutral wire from the outlet box using wire nut (A).
6. Connect the fixture Hot (BLACK) wire with the hot wire from the outlet box using wire nut (A). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
7. Attach fixture (E) to the mounting plate (B) and secure with side screws (D).
8. Place front glass panels (J) on the frame (E) and screw it by bending the metal tabs.
9. Place side glass panels (I) on the frame (E) and screw it by bending the metal tabs.
10. Place top back glass panels (H) on the frame (E) and screw it by bending the metal tabs, and make sure the glass panels outside with plastic rod.
11. Place top side glass panels (F) on the frame (E) and screw it by bending the metal tabs, and make sure the glass panels outside with plastic rod.
12. Place top front glass panels (G) on the frame (E) and screw it by bending the metal tabs, and make sure the glass panels outside with plastic rod.
13. Place door glass panels (K) on the frame (E) and screw it by bending the metal tabs.
14. Insert bulbs (not included) into the sockets.
15. Installation is complete, turn on power at fuse or circuit breaker.

\*\*\*Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.

WITH SILLICONE CAULKING COMPOUND, CAULK COMPLETELY AROUND WHERE BACK OF CANOPY MEETS THE WALL SURFACE TO PREVENT WATER FROM SEEPING INTO J-BOX.

**VISUAL COMFORT & Co.** Est. 1987

